# 3 Port Direct Operated Poppet Solenoid Valve **Rubber Seal** VK300 Series

# Universal porting

Available for N.C. valve, N.O. valve, divider valve, selector valve, etc.

N/min: 196

Compact/Width 18 X Length 63 (mm)

Low consumption

4 W DC (Standard) 2 W DC (Low wattage style)

# Applicable for vacuum use -101.2 kPa

#### Copper-free specifications standard

The portions that come in contact with fluids do not contain copper, thus enabling the standard product to be used as is.





Base mounted

#### JIS symbol

**Body ported** 





# Regarding mixed installations

Series VK300 can be mounted on manifold base (VV5K3) of series VK3000. Refer to p.1.4-4 for detailed information.

#### Model

	Valve Model	Operating pressure range (MPa)	Port size	Effective area* (Ne/min)	Weight (g)	
	VK332			3.6 (196)	_	
Dealer	VK332Y (Low wattage, DC 2W)	0 to 0.7		2.7 (147)	80	
Body	VK332E (Long loading time)		M5	2.7 (147)		
ported	VK332V (Vacuum)	-101.2 kPa to 0.1		3.6 (196)		
	VK332W (Low wattage, vacuum)	-101.2 KI a to 0.1		2.7 (147)		
	VK334			4.2 (225)		
Base	VK334Y (Low wattage, DC 2W)	0 to 0.7		2.7 (147)	120	
mounted (With sub-plate)	VK334E (Long loading time)		1/8	2.7 (147)		
	VK334V (Vacuum)	-101.2 kPa to 0.1		4.2 (225)		
	VK334W (Low wattage, vacuum)	101.2 11 0 10 0.1		2.7 (147)		



\* Value at single style. In case of manifold, it depends on operating conditions.

# **Specifications**

Actuation	Direct operated style 2 port single solenoid
Fluid	Air
Ambient and fluid temperature	-5 to 50 °C (No freezing)
Response time (0.5 MPa) (1)	10 ms or less (standard), 15ms or less (low wattage)
Manual override	Non-locking push style
Lubrication	Non-lube (Use turbine oil # 1 ISO VG32, if lubrication is required)
Mounting position	Free
Impact/vibration resistance (2)	300/50m/s <sup>2</sup>
Protection structure	Dust proof



Note 1) According to dynamic performance test of JIS B8374- 1981. (Coil temperature 20 °C, rated voltage, without surge voltage suppressor)


Note 2) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle

valve and armature, each one time when energized and de-energized. (Value in the initial stage.)

Vibration resistance: No malfunction from test with 8.3 to 2000 Hz 1 sweep, to axis and right angle directions of main valve and armature, each one time when energized and de-energised. (Value in the initial stage.)


#### Solenoid specifications

 Electrical entr	У		DIN terminal (D)				
Rated voltage		AC	100 V, 110 V, 200 V, 220 V, 240 V				
naleu vollage	;	DC	6 V, 12 V, 24 V, 48 V				
Allowable volt	age		±10 % of rated voltage				
	Standard	Inrush	9.5 VA/50 Hz, 8 VA/60 Hz				
Apparent	Standard	Holding	7 VA/50 Hz, 5 VA/60 Hz				
power (AC)*	Languagina dina	Inrush	3.5 VA/50 Hz, 3.3 VA/60 Hz				
	Long loading time	Holding	3 VA/50 Hz, 2.8 VA/60 Hz				
Power consur	nation (DC)*	Without light	4 W (Standard), 2 W (Low wattage)				
Power consur	ription (DC)	With light	4.3 W (Standard), 2.3 W (Low wattage)				
Cuma valtana		AC	Varistor				
Surge voltage	suppressor	DC	Diode (12 VDC or less: varistor)				
Indicator light		AC	Neon lamp				
Indicator light		DC	LED				






# **How to Order**

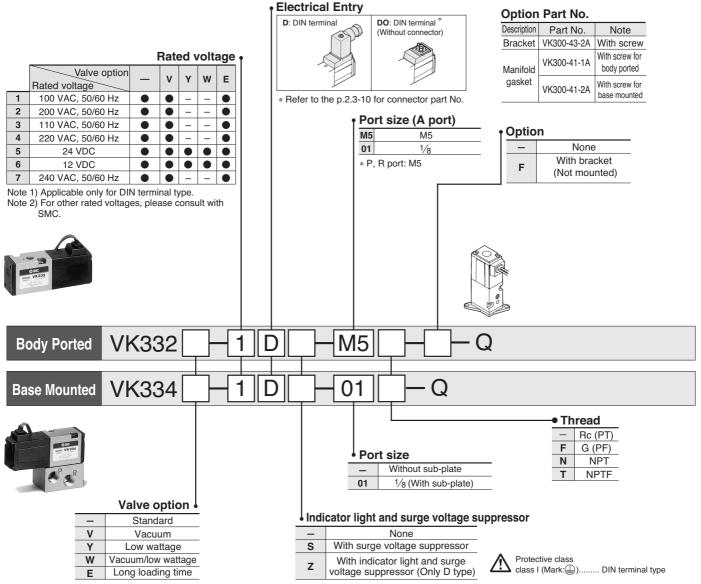

Note) Since the indicator light is bulit in connector, thus, "DOZ" is not available.

 $\ast$  The continuous duty AC type is equipped with a rectifier,

# Construction

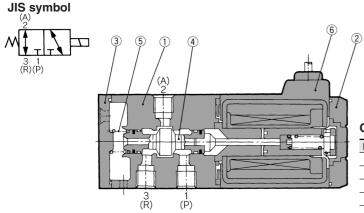

#### **Component Parts**

No.	Description	Material	Note
1	Body	Die cast aluminium	Platinum silver
2	Cover	Resin	Black
3	End cover	Resin	Black
4	Spool valve ass'y	Aluminium/NBR	
(5)	Return spring	Stainless steel	
6	Mold coil	Resin	Black

# VK300 Series Manifold



**Specifications** 

	Stations	1 to 20 stations
Pining system	Common SUP/Common EXH	Body ported, Base mounted
Piping system	Common SUP/Individual EXH	Body ported


Note) For 9 stations or more, supply air both sides of P port.


The common exhaust type should exhaust from both of the R port.

# **Common SUP/Common EXH**

# 20 Type/Body Ported How to Order




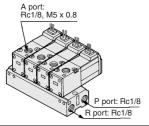


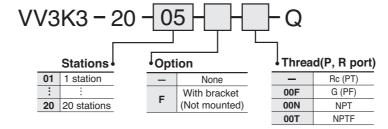

# 40 Type/Base Mounted How to Order



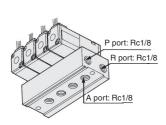

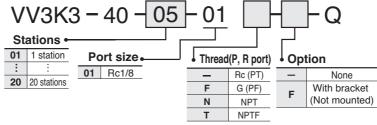

# Applicable solenoid valve

**Applicable** 

plate ass'y

**Bracket** 

VK300-42-1A

VK300-43-1A

solenoid valve

 
VK332□-□□□-M5-Q VK332□-□□□-01-Q Applicable blank

VK334□-□□□-Q

Applicable blank plate ass'y VK300-42-1A

Bracket VK300-43-1A


# 42 Type/Base Mounted (A port side ported)






(Solenoids on the same side of A ports )

 R port: Rc1/8



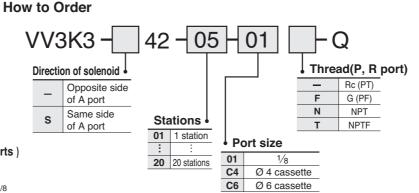

#### 

 
VK334∐-∐∐∐-Q

Applicable blank plate ass'y VK300-42-1A

# Common SUP/Individual EXH

# 21 Type/Body Ported (A port top ported)

How to Order




VV3K3 - 21		二,	(	Q
	Sta	ations 4	• Thread	I(P, R port)
	01	1 station	_	Rc (PT)
	:		00F	G (PF)
	20	20 stations	00N	NPT
0			00T	NPTF

### Applicable solenoid valve


Applicable blank plate ass'y VK300-42-1A

# *VK300*


# Combinations of Solenoid Valve, Manifold Gasket and Manifold Base

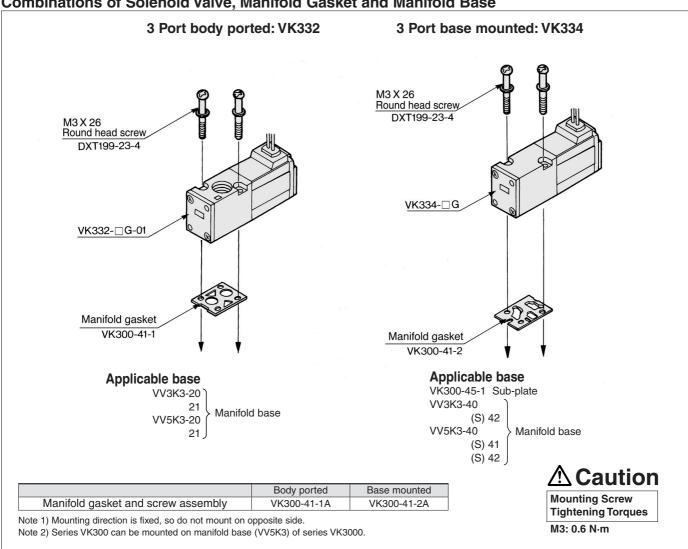


Combinations of Blank Plate Ass'y and Manifold Base

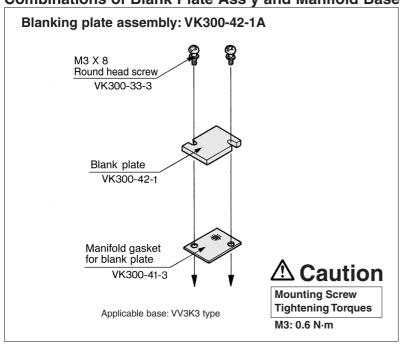


# **Dimensions: Body Ported**

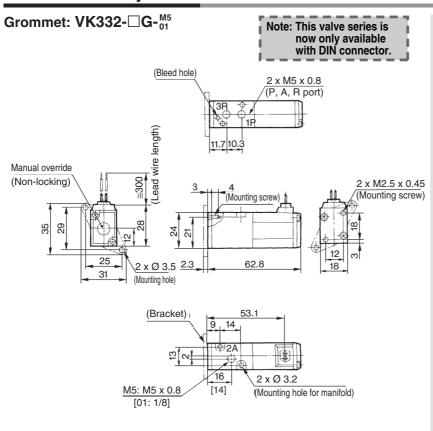

# DIN terminal: VK332-□D-M5-Q

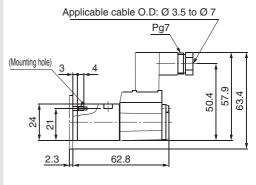


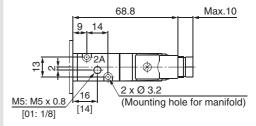



Refer to grommet type for other dimensions. []: For port size 01


# **Dimensions: Base Mounted**
 
# Grommet: VK334-□G-01

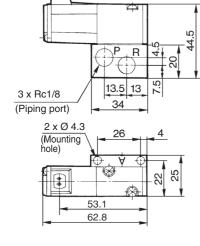





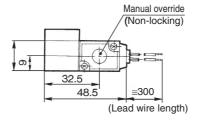

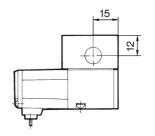

# DIN terminal: VK334-□D-01-Q

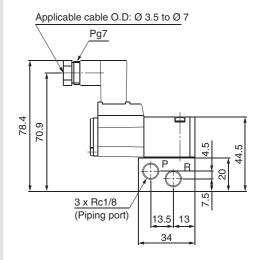


 

Refer to grommet type for other dimensions.

# VK300

# Type 20 Manifold/Body Ported (Top ported)

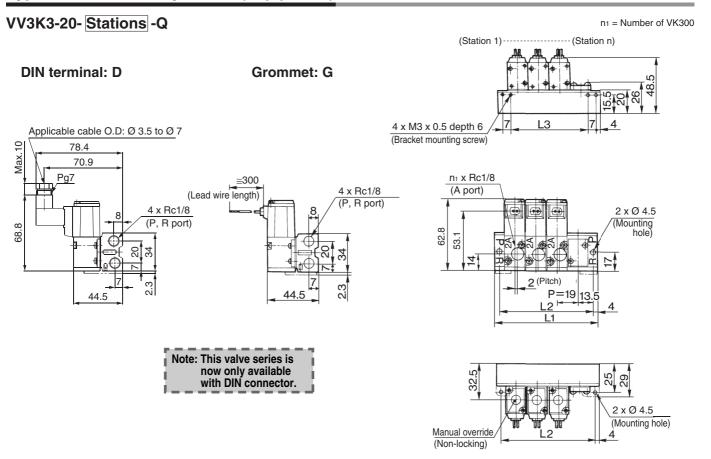


	L Dimens	sion																		n: St	ations
	L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	L <sub>1</sub>	35	54	73	92	111	130	149	168	187	206	225	244	263	282	301	320	339	358	377	396
	L2	27	46	65	84	103	122	141	160	179	198	217	236	255	274	293	312	331	350	369	388
,	L3	13	32	51	70	89	108	127	146	165	184	203	222	241	260	279	298	317	336	355	374

n<sub>1</sub> = Number of VK300

# Type 21 Manifold/Body Ported (Top ported)


# VV3K3-21- Stations -Q


**DIN terminal: D** 

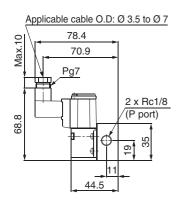

L2

**Grommet: G** 

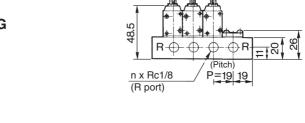

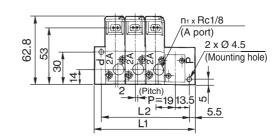


(Station 1)-----(Station n)

Note: This valve series is now only available with DIN connector.

≅300

(Lead wire length)

 44.5




#### **L** Dimension n: Stations

2 x Rc1/8

(P port)

# Type 40 Manifold/Base Mounted (Bottom ported)

# VV3K3-40- Stations -01-Q

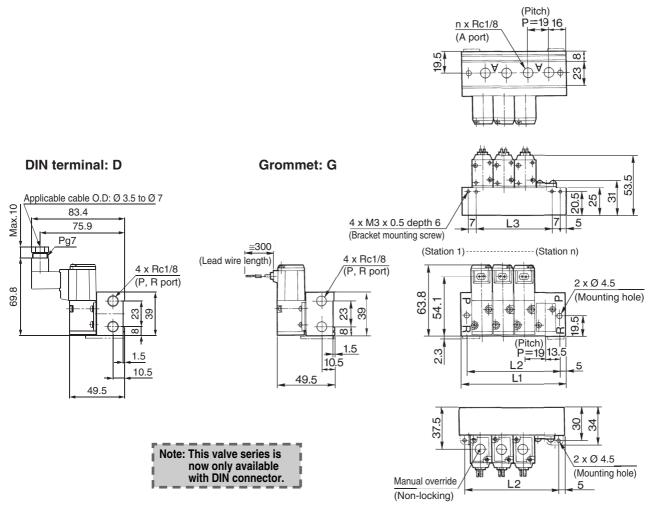

**L Dimension** n: Stations 

# Type 42 Manifold/Base Mounted (Side ported)


# VV3K3-42- Stations -01-Q


# **DIN terminal: D** Applicable cable O.D: Ø 3.5 to Ø 7 Max.10 83.4 75.9 Pg7 11.5 (Lead wire length) 4 x Rc1/8 (P, R port) 70.8

#### **Grommet: G**


4 x Rc1/8 (P, R port)

≅300

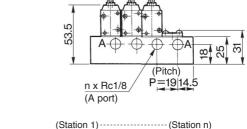


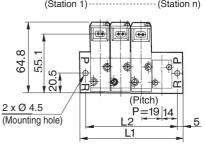


 
Note: This valve series is now only available with DIN connector.





# Built-in One-touch fitting: VV3K3-42- Stations -C4, C6-Q

 

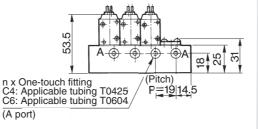

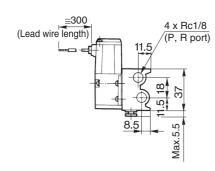


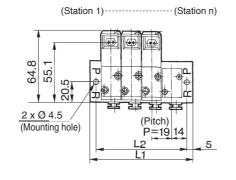


 

Refer to the above drawing for DIN terminal dimensions.

# Solenoid at A port side: VV3K3-S42-Stations - Q

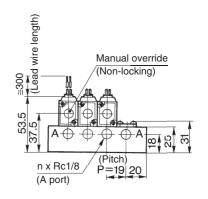

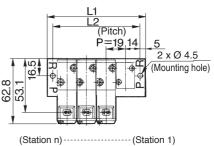

Refer to the above drawing for other dimensions.

L1 38 57 76 95 114 133 152 171 190 209 228 247 266 285 304 323 342 361 380 399 L2 28 47 66 85 104 123 142 161 180 199 218 237 256 275 294 313 332 351 370 389	L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	L <sub>1</sub>	38	57	76	95	114	133	152	171	190	209	228	247	266	285	304	323	342	361	380	399
	L2	28	47	66	85	104	123	142	161	180	199	218	237	256	275	294	313	332	351		389

# **⚠** Precautions

# Be sure to read before handling. Refer to p.0-33 to 0-36 for Safety Instructions and common precautions.

# ⚠ Caution

#### **How to Use DIN Connector**

Cut off the power and air supply before mounting/ demounting the connector. Firmly execute lead wire and socket press-contacting and connector mounting.

- ①Loosen set screw and pull out connector from the terminal block of solenoid.
- ②Remove screw and insert screwdriver into the slit area near the bottom of terminal block to separate block and housing.
- ③Loosen terminal screw of terminal block, place bare end of lead wire into terminal in accordance with wiring methods, and affix it securely with the terminal screw.
- 4)Tighten ground nut to secure the wire.

# **⚠** Caution

Use the cabtire cable ( $\emptyset$  3.5 to  $\emptyset$  7) for wiring to meet IP65 standards (protective construction). Tighten the ground nut and set screw with the specified range of torque.

#### •Change of electrical entry. (Orientation)

After separating terminal block and housing, mount housing at any position (total 4 directions, 90° degrees), therefore, changing electrical entry.

- \* In the case of indicator light, avoid damaging the light with the lead wire.
- (In the case of a manifold, change in the direction of electrical entry is limited depending on the mounting position.)


#### •Precautions

Plug connector in or out vertically, never at an angle.

#### •Applicable cable

Cable O. D.: Ø 3.5 to Ø 7


(Reference) 0.5mm<sup>2</sup> 2 core and 3 core wires equivalent to JISC3306.

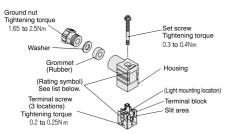


#### •Connector part no.: K31 •Connector with light part No.


Rated voltage	Voltage symbol	Part no.
100 VAC	100 V	VK300-82-2-01
110 VAC	110 V	VK300-82-2-03
200 VAC	200 V	VK300-82-2-02
220 VAC	220 V	VK300-82-2-04
240 VAC	240 V	VK300-82-2-07
6 VDC	6 V	VK300-82-2-51
12 VDC	12 V	VK300-82-2-06
24 VDC	24 VD	VK300-82-2-05
48 VDC	48 VD	VK300-82-2-53
  
#### Connector with light circuit





R: Resistor

 

24 VDC or more

D: Protect diode
LED: Light emitting diode
R: Resistor

# Indicator light and surge voltage suppressor

Rat	-0d	DIN tern	ninal (D)	
		Standard, Y, V, W	Long loading (E)	Symbol
AC	Without light	NO.2 Varistor	NO.1 POOL NO.2 D, DS	s
AC	With light	NO.1 Neon © 32 No.2	No.1 Neon@ \$ 77.5 lamp \$ 2 4.0 NO.2	z
DC 24V	Without light	NO.1(+)	ego Tio	s
48V	With light	NO.1(+)		z
DC	Without light	SO.1	7 [] [	s
6V 12V	With light	NO.1	Varistor	z

Precautions for wiring when using 24 VDC or higher: With the grommet style, connect the positive (+) side to the red lead wire and the negative (-) side to the black lead wire. With the DIN terminal, connect the positive (+) side to the connector's No. 1 terminal, and the negative (-) side to the No. 2 terminal. [Refer to the marks on the terminal board.]

\* For 12 VDC or below, there is no positive (+) or negative (-) directionality.

# Vacuum Use: VK33□V (VK33□W)

When mounting a valve on the manifold base or sub-plate, etc., the mounting orientation is already decided. If mounted in a wrong direction, the equipment to be connected may result in malfunction.

Refer to pages 2.3-5 to 2.3-9 for external dimensions in mounting.

# **⚠** Caution

 Because this valve leaks, it cannot be used for maintaining a vacuum (or pressure) in a pressure vessel

# Long Loading Style: VK33□E

This product is to be used for long time energisation.



- 1. Because this is to be used for long loading, it is not for highly frequency use. Contact SMC if it is to be operated in excess of once a day, including low frequency operations.
- 2. Make sure to switch it at least once every 30 days.

### Flow Rate

Refer to the p.0-36 for flow rate.

